

A. GENERAL INSTRUCTIONS

1. Compress the trigger to expose fresh cleaning fabric in the window
2. Press the fiber connector against the top of the cleaning fabric and move the connector downward one time
3. Depress the trigger



Note the amount of cleaning fabric left in the reel using the indicator window. Replace reel when necessary.



B. REEL REPLACEMENT

1. Open the PCT-FCC-500 body by removing the two screws on the side with the viewing window (be careful to not lose the screws)
2. Remove the clear plastic reel cover from reel B and set it aside. Remove and discard the used reel A and reel B. (Make note of how the cleaning fabric was routed between reel B and reel A)
3. Open the packaging containing the replacement reels, and insert reel A and reel B into the PCT-FCC-500 body as shown in the image above
4. Remove the adhesive tape from reel A and attach it to reel B as shown
5. Carefully wind the cleaning fabric through the tool, as was noted in step 2, and attach the end of the fabric to the adhesive tape on reel B. Replace the clear plastic reel cover onto reel B.
6. Close the body and reinstall the two screws removed in step 1. Compress the trigger 3 to 5 times to expose fresh cleaning fabric before using.



Do not compress the trigger while the body is open

